
# **MAYER** FABRICS

### AS | Vinyl

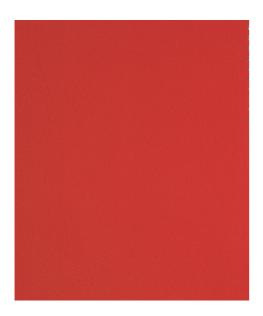

#### **CLEANING CODE**

WS: Water/Solvent Cleaner - Spot clean with a mild solvent, an upholstery shampoo, or the foam from a mild detergent. When using a solvent or dry cleaning product, follow instructions carefully and clean only in a well-ventilated room. Avoid any product that contains carbon tetrachloride or other toxic materials. With either method, pretest a small area before proceeding. Always rinse promptly with clean water.

CFC: Coated Fabrics Cleaning - When a spill/stain occurs wipe immediately with a clean dry cloth. Carefully remove the majority of the stain then follow the steps below.

Soap & Water - Remove ordinary dirt and smudges with a mild soap and water solution using a soft cloth or towel. Rinse with fresh water and wipe dry.

Non-abrasive Cleaners - If residue remains, use a straight application of the following cleaners: Fantastik or 409 and gently clean with a soft cloth. Rinse with fresh water and wipe dry.

Isopropyl Alcohol - More stubborn stains may be eliminated using a cotton cloth soaked in 70-91% isopropyl (rubbing) alcohol. Wipe without spreading stain to surrounding area. A second application should be applied with vigorous rubbing in a circular motion. For highly textured material, a soft brush is recommended to clean valleys and crevices. Rinse with fresh water and wipe dry.

BC: Bleach Cleanable - 1 parts bleach, 9 parts water = 10% bleach, 90% water solution. Do not clean / disinfect fabric for longer than 10 minutes using the 10% bleach solution. Always rinse promptly with clean water after applying the bleach solution. Failure to do so will void any and all warranties.

Please note: If specific cleaners are not listed, then the pattern has not been tested for cleaning solution compatibility.

### **DISINFECTANTS AND CLEANERS**

ASEPTICARE - Approved - No Effect

# **MAYER** FABRICS

ASEPTICARE TB-II - Approved - No Effect

AVERT SPRACIDAL DISINFECTANT CLEANER - Approved - No Effect

BIREX SE DISINFECTANT - Approved - No Effect

BLEACH (RATIO OF WATER TO BLEACH) See the bleach c ... - Approved - No Effect

BLEACH-RITE DISINFECTING SPRAY - Approved - No Effect

CAVIWIPES XL - Approved - No Effect

CAVICIDE - Approved - No Effect

CAVICIDE 1 - Approved - No Effect

CITRACE GERMACIDE - Approved - No Effect

CLOROX BROAD SPECTRUM QUATERNARY DISINFECTANT CLEA... - Approved - No Effect

CLOROX HEALTHCARE BLEACH GERMICIDAL CLEANER - Approved - No Effect

CLOROX HEALTHCARE BLEACH GERMICIDAL WIPE - Approved - No Effect

CLOROX HEALTHCARE EZ-KILL QUAT ALCOHOL CLEANER DIS... - Approved - No Effect

CLOROX HEALTHCARE FUZION CLEANER DISINFECTANT - Approved - No Effect

CLOROX HEALTHCARE VERSASURE CLEANER DISINFECTANT W... - Approved - No Effect

CLOROX HYDROGEN PEROXIDE CLEANER DISINFECTANT SPRA... - Approved - No Effect

CLOROX HEALTHCARE HYDROGEN PEROXIDE CLEANER DISINF... - Approved - No Effect

DISPATCH HOSPITAL CLEANER DISINFECTANT WITH BLEACH - Approved - No Effect

FADE-A-DYNE II - Approved - No Effect

FANTASTIK ALL PURPOSE CLEANER - Approved - No Effect

FORMULA 409 ALL PURPOSE CLEANER - Approved - No Effect

FRESH BREEZE TB DETERGENTS - Approved - No Effect

ISOPROPYL ALCOHOL - Approved - No Effect

LYSOL SPRAY DISINFECTANT - Approved - No Effect

OPTIM 33 TB DISINFECTANT (ALTERNATE FOR ACCEL TB) - Approved - No Effect

OXIVIR 1 RTU - Approved - No Effect

OXIVIR TB - Approved - No Effect

OXIVIR TB WIPES - Approved - No Effect

OXYCIDE DAILY DISINFECTANT CLEANER - Approved - No Effect

PERISEPT 62 SPORICIDAL DISINFECTANT - Approved - No Effect

SANI CLOTH PLUS GERMICIDAL WIPES (RED LID) - Approved - No Effect

SUPER SANI CLOTH GERMICIDAL WIPES (PURPLE LID) - Approved - No Effect

SANI CLOTH HB GERMICIDAL WIPES (GREEN LID) - Approved - No Effect

SANI-PROFESSIONAL MULTI SURFACE WIPES - Approved - No Effect

SANIZIDE PLUS SURFACE DISINFECTANT SPRAY - Approved - No Effect

SANI CLOTH AF3 GERMICIDAL WIPES (GREY LID) - Approved - No Effect

SANI CLOTH BLEACH GERMICIDAL WIPES (ORANGE LID) - Approved - No Effect

VIREX II 256- CONCENTRATE - Approved - No Effect

VIREX PLUS ONE-STEP DISINFECTANT CLEANER & DEODERI ... - Approved - Slight Effect

VIROX 5 CONCENTRATE (1:256 DILUTION; CN PRODUCT) - Approved - No Effect

VIROX 5 RTU (CN PRODUCT) - Approved - No Effect

VIROX AHP 5 DISINFECTANT CLEANER SURFACE WIPES - Approved - No Effect

WEX-CIDE 128 CLEANER - Approved - No Effect

POWER QUAT - Approved - No Effect

NLV-2 DISINFECTANT CLEANER & VIRUCIDE - Approved - No Effect

SANI-HYPERCIDE GERMICIDAL SPRAY - Approved - No Effect

SANI-24 GERMICIDAL SPRAY - Approved - No Effect

SANI-PRIME GERMICIDAL SPRAY - Approved - No Effect

500 S. KITLEY AVE., INDIANAPOLIS, IN 46219

TOLL FREE: 800.428.4415 T: 317.267.2626 F: 317-267-2629

# **MAYER** FABRICS

SUPER HDQ L 10 - Approved - No Effect

STERI-7 XTRA CONCENTRATE (recommended dilution rat... - Approved - No Effect

STERI-7 XTRA WIPES - Approved - No Effect

TB-CIDE QUAT – Approved - No Effect

VERT-2 GO ED - Approved - No Effect

VITAL OXIDE - Approved - No Effect

CONCEPT 256N - Approved - No Effect

HALOMIST - Approved - No Effect

EVACLEAN PURTABS 500ppm - Not Approved - Severe Effect

KENNELSOL - Approved - No Effect

J-512 SANITIZER - Approved - No Effect

ERC PERFORMANCE WIPES - Approved - No Effect

AVISTAT-D RTU SPRAY DISINFECTANT CLEANER - Approved - No Effect

HEPASTAT 256 - Approved - No Effect

PURELL MULTI SURFACE DISINFECTANT - Approved - No Effect

PURELL HEALTHCARE SURFACE DISINFECTANT - Approved - No Effect

ECOLAB PEROXIDE MULTI SURFACE CLEANER AND DISINFEC ... - Approved - No Effect

ECOLAB PEROXIDE MULTI SURFACE CLEANER AND DISINFEC... - Approved - No Effect

REJUVENATE RTU WIPES ONE STEP - Approved - No Effect

RE-JUV-NAL - Approved - No Effect

CLEAN ON THE GO HDQ C2 NEUTRAL DISINFECTANT - Approved - No Effect

3M DISINFECTANT CLEANER RCT CONCENTRATE - Approved - Slight Effect

ALPHA HP MULTI-SURGACE DISINFECTANT - Approved - No Effect

GENESAN'S CONTACT PLUS DISINFECTANT - Approved - No Effect

3M HB QUAT DISINFECTANT CONCENTRATE - Approved - No Effect

3M HB QUAT DISINFECTANT CLEANER CONCENTRATE 25L - Approved - No Effect

CAVIWIPES HP - Approved - No Effect

Array Quat-Clean - Approved - No Effect

DIVERSEY ACCEL PREvention CONCENTRATE - Approved - No Effect

ECOLAB DISINFECTANT 1 WIPE - Not Approved - Severe Effect

SANI CLOTH PRIME GERMICIDAL WIPES (FUCHSIA LID) - Approved - No Effect

LYSOL DISINFECTING WIPES - Approved - No Effect

OXIVIR THREE 64 - Approved - No Effect

CAVIWIPES BLEACH - Not Approved - Severe Effect

EVACLEAN PUR ONE - Not Approved - Severe Effect

© Mayer Fabrics 2025 Specifications are subject to change.

# **MAYER** FABRICS

KEY	DEFINITION
Approved   No Effect	No change in color or surface finish.
Approved   Slight Effect	A change in color or surface finish only visible at certain angles.
Approved   Moderate Effect	A change in color or surface finish visible from all angles and directions, but does not appreciably alter the original condition of the material.
Not Approved   Severe Effect	A change in color or surface finish, which obviously and markedly alters the original condition of the specimen.

The results for the cleaners/disinfectants listed does not imply "approved" or that the results are guaranteed. These evaluations are indicators after laboratory testing and may not be indicative of field performance. Customers should first determine if products are appropriate for use on their surfaces. The majority of today's disinfectant chemistries are mainly designed for use on hard environmental surfaces such as ceramic, porcelain, laminate, steel etc. After each application these types of disinfectants on seating surfaces the surface must be wiped with clean water and dried with a clean towel to remove any chemical residue that could eventually discolor or degrade the material surface.

Failure to follow the above dilution recommendations, directions when using using these types of cleaners/disinfectants or the application of a clean water rinse after each application can expedite a product failure and will void any warranty claim.

As of: 12.14.2025